

FORK SPRING APPLICATION LIST				
MAKE	MODEL	YEAR	IKON Nr	SPACER /COMMENT
SUZUKI	RG125	93on	500-073	
SUZUKI	RM125	82-83	500-197	250MM X 31
SUZUKI	RM125	84-88		
SUZUKI	RM125	90		
SUZUKI	RM125	91		
SUZUKI	PE175	78-79		
SUZUKI	PE175	82-84	500-197	250MM X 31
SUZUKI	DR250	90-93		
SUZUKI	DR250S	90-95		
SUZUKI	PE250	77-79		
SUZUKI	RM250	83-87		
SUZUKI	RM250	89-90		
SUZUKI	RM250	91		
SUZUKI	RMX250	89-90		
SUZUKI	RMX250	91		
SUZUKI	RG250W	87on	500-127	
SUZUKI	RGV250	89-90	500-010	
SUZUKI	RGV250	91	500-088	
SUZUKI	RGV250 VJ 22 B	92on	500-201	
SUZUKI	Volty 250		500-094	10MM x 29mm
SUZUKI	DR350	90-93	500-043	48.25MM X 36
SUZUKI	DR350	94-99		
SUZUKI	DR350S	89on	500-043	48.25MM X 36
SUZUKI	DR350S/SE	92-97	500-043	48.25MM X 36
SUZUKI	DR350SE	98-99	500-204	25 x 37mm
SUZUKI	RM370	77		OE spring 430mm free, 27.0 OD. Desired rate approx 3
SUZUKI	DR-Z400 / E	00-04	500-244	
SUZUKI	DR-Z400 S	00-01	500-244	

SUZUKI	DR-Z400 S	02-04	500-244	
SUZUKI	GS400	77-78	500-096	NONE
SUZUKI	GSF400 BANDIT	89on	500-021	
SUZUKI	GSX400E (TWIN)	80on	500-183	
SUZUKI	GSX400F (FOUR)	81on	500-183	
SUZUKI	GSXR400	91on	500-031	
SUZUKI	GSX400X/IMPULSE	86-88	500-094	
SUZUKI	GS425	79	500-096	NONE
SUZUKI	GS450	80-83	500-096	NONE
SUZUKI	DR500S	83on	500-007	
SUZUKI	GS500E, GM51 B/A frames	89-02	500-066	DISC STD
SUZUKI	RG500 GAMMA	85on	500-195	DISC STD
SUZUKI	RM500	83-84	500-043	250MM X 36
SUZUKI	GS550	77-80	500-083	NONE
SUZUKI	GS550E/ES	83-86	500-008	NONE
SUZUKI	GSX550 ES/EF	83on	500-040	
SUZUKI	600 KATANA	88-98	500-003	USE STD
SUZUKI	600 KATANA	98-04	500-102	Shorten original to suit
SUZUKI	DR600/S	85on	500-194	
SUZUKI	GSF600 BANDIT	95on	500-003	USE STD
SUZUKI	GSX600F	88-90	500-214	500-012 +25MM spacer is a good alternative
SUZUKI	GSX600F	91-97	500-088	
SUZUKI	GSX600F	98on	500-134	
SUZUKI	GSXR600	97on	500-119	
SUZUKI	GSXR600 RACE (8 N/MM)	97on	501-075	
SUZUKI	GSXR600 RACE (8.5 N/MM)	97on	501-074	
SUZUKI	GSXR600 RACE (9 N/MM)	97on	501-137	
SUZUKI	GSXR600 RACE (9.5 N/MM)	97on	501-138	
SUZUKI	RF600R	93on	500-022	
SUZUKI	VS600	95on	500-044	

SUZUKI	AN650 Burgman scooter	upto 08	500-030	Shorten original spacer to 145mm.
SUZUKI	DL650 V-Storm, WVB1	04 -	500-063	Remove original spacer
SUZUKI	DR650S	90-95	500-110	NONE
SUZUKI	DR650SE (SP46 B)	96-09	500-043	
SUZUKI	DR650R/RS	90-92	500-109	
SUZUKI	DR650R	93-04	500-110	
SUZUKI	GR650	83	500-061	NONE
SUZUKI	GS650E	81	500-061	NONE
SUZUKI	GS650G/GL	81-83	500-083	100MM X 25
SUZUKI	GS650 KATANA	81on	500-083	
SUZUKI	LS650 SAVAGE	91on	500-049	
SUZUKI	SV650	99-02	500-102 500-201, 500-039, 500-177	USE STD
SUZUKI	SV650 N	03 on	500-002 or 500- 019 or 500	when using 500-019 or 500-146 will need a 10mm long x 35mm diameter spacer
SUZUKI	XF650 FREEWIND	97on	500-046	
SUZUKI	DR750	89-90	500-194	
SUZUKI	GS700E/ES		500-008	80MM X 28
SUZUKI	VS700 INTRUDER		500-008	40MM X 29
SUZUKI	750 KATANA		500-003	DISC STD
SUZUKI	750 KATANA		500-102	USE STD
SUZUKI	GS750 KATANA,	83	500-185	100MM X 27
SUZUKI	GS750E/L	79on	500-061	NONE
SUZUKI	GS750E/ES		500-008	80MM X 28
SUZUKI	GSX750	98on	500-216	
SUZUKI	GSX750E	80	500-181	
SUZUKI	GSX750ES	83on	500-211	
SUZUKI	GSX750EF	83on	500-212	

SUZUKI	GSX750EZ M AD		500-083	
SUZUKI	GSX750F	89-97	500-028	
SUZUKI	GSX750F	98-08	500-134	Re-Use original spacer
SUZUKI	GSX750L	84on	500-162	
SUZUKI	GSX750R	85-87	500-129	
SUZUKI	GSX750S KATANA	79on	500-185	
SUZUKI	GSXR750, GR75A	85-87	500-129 500-093	37MM X 34 to be used with 500-093.
SUZUKI	GSXR750	88-89	500-050	USE STD
SUZUKI	GSXR750 (UPSD 41MM)	90-92	500-031	
SUZUKI	GSXR750 (UPSD 41MM)	93	500-031	
SUZUKI	GSXR750 (UPSD 43MM)	94-95	500-032	
SUZUKI	GSXR750 (UPSD 43MM)	96on	500-070	
SUZUKI	GSXR750R	89	500-050	
SUZUKI	GT750	73-77	500-069	NONE
SUZUKI	VS750 INTRUDER	86on	500-196	USE STD
SUZUKI	DR800S	89-90	500-194	
SUZUKI	DR800S	91on	500-111	
SUZUKI	VL800 Volusia			
SUZUKI	VS800 INTRUDER	92on	500-196	USE STD
SUZUKI	VX800	89on	500-196	USE STD
SUZUKI	VZ800 MARAUDER	97-05	501-136	
SUZUKI	GS850G/L	83	500-185	USE STD
SUZUKI	RF900RS2	95on	500-017	
SUZUKI	DL1000 V-Strom	04-09	500-050	To be checked.
SUZUKI	GS1000E/S	78on	500-083	NONE
SUZUKI	GS1000 KATANA		500-083	NONE
SUZUKI	GS1000G	81on	500-185	100MM X 27
SUZUKI	SV1000, SV1000S	03-06	500-139	
SUZUKI	TL1000S	97on	500-092	

SUZUKI	1100 KATANA	88-93	500-003	USE STD
SUZUKI	GS1100E		500-185	47MM X 27
SUZUKI	GS1100E		500-185	NONE
SUZUKI	GS1100G	81on	500-083	DISC STD
SUZUKI	GS1100GK		500-196	23.75MM X 30
SUZUKI	GS1100L		500-185	100MM X 27
SUZUKI	GSX1100G		500-037	USE STD
SUZUKI	GSX1100EF	84on	500-211	
SUZUKI	GSX1100ES	83on	500-161	
SUZUKI	GSX1100EZ	82-83	500-211	
SUZUKI	GSX1100F/KATANA	upto 88	500-023	
SUZUKI	GSX1100F	89-93	500-129	
SUZUKI	GSX1100F	94on	500-177	
SUZUKI	GSX1100F	91on	500-050	
SUZUKI	GSX1100S KATANA, (GSX1100 EX 1981)	80on	500-185	
SUZUKI	GSXR1100	86-88	500-082	NONE
SUZUKI	GSXR1100	89-90	500-050	NONE
SUZUKI	GSXR1100 (UPSD 41MM)	90-92	500-016	
SUZUKI	GSXR1100	93-94	500-033	
SUZUKI	GSXR1100	95on	500-034	
SUZUKI	GS1150	84-86	500-185	22MM X 27
SUZUKI	1200 BANDIT / GSF1200 BANDIT GV75A	96-00	500-051	USE STD, may also use 500-050.
SUZUKI	1200/S BANDIT WVA9	01-04	500-051	USE STD
SUZUKI	GSX1200 Inazuma	98-02		
SUZUKI	GV1400 CAVALCADE	86-89		
SUZUKI	GSX1300R HYABUSA	99 on	500-223	
SUZUKI	GSX1400 (WVBN)	01-	500-057	Shorten original spacer by 8mm
SUZUKI	VS1400 INTRUDER	87-04	500-035	NONE
SUZUKI	VL1500 INTRUDER LC	98-04	500-003	21MM X 34
SUZUKI	VZ 1600 MARAUDER	04		